

# Octave Installation Guide

**Category:** C & I Metering

**Type:** Installation Manual

**Issue:** Operation





1	General Information	Page
	1. Introduction	3
	2. Package Contents	3
	3. General Safety	3
	4. Unpacking Instructions	3
2	Technical Data	
	1. Measurement Method	4
	2. Mechanical Data	4
	3. Dimensions and Scaled Drawings	5
	4. Performance Data	5
	5. Pressure Loss Charts	6
3	Installation Requirements	
	1. Pre-Installation	7
	2. Handling the Octave	7
	3. Installation Notes	7
	4. Installation Location & Position	8
	5. Additional Installation Requirements	9
4	Register Display and Output	
	1. Digital Display	10
	2. Pulse Output (Open Drain)	11
	3. Pulse Output (SSR Dry Contact)	12
	4. 4-20 mA (Analog)	13
	5. Encoder Output (Serial)	14
	6. No Output (Manual read)	14
	7. Installation of Output Module	15
	8. Wire Connectivity Chart	16



## 1.1 Introduction

---

Thank you for choosing Master Meter's Octave Ultrasonic Meter. This unique design delivers precise flow measurement without any moving parts for long life, sustained accuracy and exceptional performance. The following information within this guide will help you gain a better understanding of the many features and capabilities your new Octave Ultrasonic meter has to offer.

## 1.2 Package Contents and Documentation

---

- One complete Octave Ultrasonic Flow Meter (meter body with integral electronics), size as indicated on the packaging box.
- Octave User Installation Guide
- Certificate of calibration data (adhered to the inside of the meter lid)
- (Optional) If specified at the time of order; one output module

## 1.3 General Safety

---

Prior to installation of your new Octave Ultrasonic Meter please consider the following;

- Do not install, operate or maintain this flow meter without reading, understanding and following the factory-supplied instructions. Otherwise, injury or damage may result.
- Read instructions carefully before beginning installation and save them for future reference.
- Observe all warnings and instructions marked on the product.
- Consider handling and lifting instructions to avoid damage.
- If the product does not operate normally, refer to the service instructions or to a qualified Master Meter representative.
- There are no operator-serviceable parts inside this product.

## 1.4 Unpacking Instructions and Inspection

---

This product has been thoroughly inspected and tested prior to shipment and is ready for operation. After carefully unpacking the meter, inspect all contents for shipping damage before attempting to install. If there is any indication of physical damage found, immediately contact the responsible transportation service and your local Master Meter representative. **Note:** *The LCD display remains active for the life of the meter. If the display is not on, this may be an indication of damage during shipment.*



2.1 Measurement Method

The Octave’s measurement method is based on an ultrasonic, transit time, dual beam sensor array which determines the length of time it takes an ultrasonic sound wave to travel the distance between the two sensors located in the meter’s body. The two sensors function as both the transmitter and the receiver, each one alternating these functions so that the ultrasonic wave travels both with and against the direction of the flow. Ultrasonic waves travel slower against the flow than with the flow, thus the time difference of two waves traveling with and against the flow leads to determining the velocity and volume of the water.

**Note: These sensors are ultra-sensitive; they are not designed to be modified by the user. Any modifications void warranty on this product.**

- The Octave ultrasonic flow meter is a battery-powered, precision flow meter designed for linear, bidirectional flow measurement of water.
- Flow measurement data is communicated through the output module.
- The Octave can be set up for a wide range of applications.

2.2 Mechanical Data


<b>Maximum Working Pressure</b>	175 PSI
<b>Liquid Temperature</b>	32.1° F - 122° F (0.1° C to 50° C)
<b>Referenced Standards</b>	Meets ANSI / AWWA Standard C715-18 & C750-10; ISO 4064 rev. 2005
<b>Configuration</b>	Compact - Display built into unit
<b>Power Source</b>	2 x D size Lithium Thionyl Chloride batteries - 10 year warranted life time
<b>Environmental Protection</b>	NEMA 6P (IP68), Ambient operation temperature -13° F to 131° F (- 25° C to 55° C)
<b>Data Units</b>	Multi-line 12 digit Liquid Crystal Display (LCD) - <i>Programmable USG, Imperial Gallons, Cubic Feet, Cubic Meters, Barrels, Acre Feet or Acre Inch for Volume and GPM, Lt/s, Lt/m or M³/h for rate of flow.</i>
<b>Volume Display Options</b>	<ol style="list-style-type: none"> <li>1. Net Volume (Forward measurement minus reverse)</li> <li>2. Forward Only</li> <li>3. Alternating Flow (Forward and Reverse flow displayed separately)</li> </ol>
<b>Flanges</b>	ANSI / AWWA C702 <ul style="list-style-type: none"> <li>• 2" Oval Type – Cast Iron Floating Flange</li> <li>• 3" – 8" Round Type – Cast Iron Floating Flange</li> <li>• 8 – 12" Round Type – Cast Iron Fixed Flange</li> </ul>
<b>Meter Body Construction</b>	2" – 8" Grade 316 Stainless Steel 10" – 12" Ductile Iron Epoxy Coated
<b>Output (optional)</b>	<ol style="list-style-type: none"> <li>1. Dual Digital Pulses (Open Drain or Dry Contact)</li> <li>2. 4-20 mA (Powered loop)</li> <li>3. Encoder Output (up to 8 digit encoded readings)</li> </ol>
<b>Certifications/Listings</b>	<ul style="list-style-type: none"> <li>• UL Certified – Safety US EX29710 on 2" – 8" Stainless Steel Floating Flange</li> <li>• FM Approved on 2" – 12" Stainless Steel and Ductile Iron</li> <li>• ANSI / NSF 372 (AB1953 or NSF61G)</li> </ul>



2.3 Dimensions

Octave										
Model	Floating Flanges								Solid Flange	
Nominal Size	2" x 10" (50 mm)	2"x13" (50 mm)	2"x15.25" (50 mm)	2"x17" (50 mm)	3" (80 mm)	4" (100 mm)	6" (150 mm)	8" (200 mm)	10" (250 mm)	12" (300 mm)
L - Length	10" (250 mm)	13" (330 mm)	15.25" (390 mm)	17" (432 mm)	12" (305 mm)	14" (356 mm)	18" (457 mm)	20" (508 mm)	17 3/4" (451 mm)	19 3/4" (502 mm)
W - Width	5 3/4" (146 mm)	5 3/4" (146 mm)	5 3/4" (146 mm)	5 3/4" (146 mm)	7 1/2" (190 mm)	9" (229 mm)	11" (280 mm)	13 1/2" (343 mm)	16" (406 mm)	19 3/4" (502 mm)
H - Height	6 3/4" (172 mm)	6 3/4" (172 mm)	6 3/4" (172 mm)	6 3/4" (172 mm)	8 1/2" (216 mm)	9 7/8" (250 mm)	10 7/8" (276 mm)	12 7/8" (327 mm)	16 1/2" (419 mm)	19 3/4" (502 mm)
C - Center Pipe Height	2 1/8" (54 mm)	2 1/8" (54 mm)	2 1/8" (54 mm)	2 1/8" (54 mm)	3 1/2" (90 mm)	4 1/2" (115 mm)	5 1/8" (130 mm)	6 3/8" (162 mm)	8" (203 mm)	9 7/8" (251 mm)
Weight - Ductile Iron	-	-	-	-	-	-	-	-	150 lbs. (68 kg)	210 lbs. (96 kg)
Weight - Stainless Steel	15 lbs (7 kg)	20 lbs (9 kg)	22 lbs (10 kg)	24 lbs (11 kg)	23 lbs (10.5 kg)	35 lbs. (16 kg)	51 lbs. (23 kg)	78 lbs. (35 kg)	-	-

2" Octave is offered in 10" length with an optional add-on of a 3", a 5.25" or a 7" spool. Gaskets, nuts, bolts, & washers are included in weights of 13", 15.25" and 17".

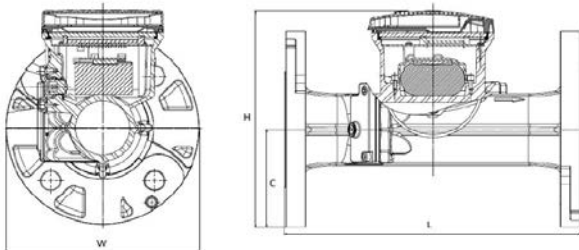

2.4 Performance Data


Octave Nominal Size inch (mm)	Extended Low Flow 95% - 105% Accuracy GPM (Lt/s)	Normal Flow Range 98.5% - 101.5% Accuracy GPM (Lt/s)	‡ Continuous Safe Max Flow GPM (Lt/s)	Linearity Range +/- 0.5% Maximum Deviation GPM (Lt/s)
2" (50mm)	1/4 (.016)	1/2 - 250 (.032 - 15.77)	250 (15.77)	4 - 200 (.25 - 12.62)
3" (80 mm)	1/2 (.032)	1 - 500 (.06 - 31.54)	500 (31.54)	5 - 350 (.32 - 22.08)
4" (100 mm)	3/4 (.047)	1-1/2 - 1,000 (.09 - 63.09)	1000 (63.09)	15 - 700 (.94 - 44.16)
6" (150 mm)	2 (.13)	3 - 1,600 (.19 - 100.94)	1,600 (100.94)	20 - 1,150 (1.26 - 72.55)
8" (200 mm)	4 (.25)	5 - 2,800 (.32 - 176.65)	2,800 (176.65)	50 - 2,000 (3.15 - 126.18)
10" (250 mm)	8 (.50)	14 - 5,500 (.88 - 346.99)	5,500 (346.99)	400 - 4,000 (25.24 - 252.36)
12" (300 mm)	8 (.50)	14 - 5,500 (.88 - 346.99)	5,500 (346.99)	400 - 4,000 (25.24 - 252.36)

‡ Continuous Safe Max Flow ranges listed for the Octave are for accurate flow measurement only and do not limit the Octave from meeting the Short-term Deluge Flow for fire services.




2.5 Pressure Loss Charts


2" OCTAVE SS FF (standard ports)  
Pressure Loss Performance Chart

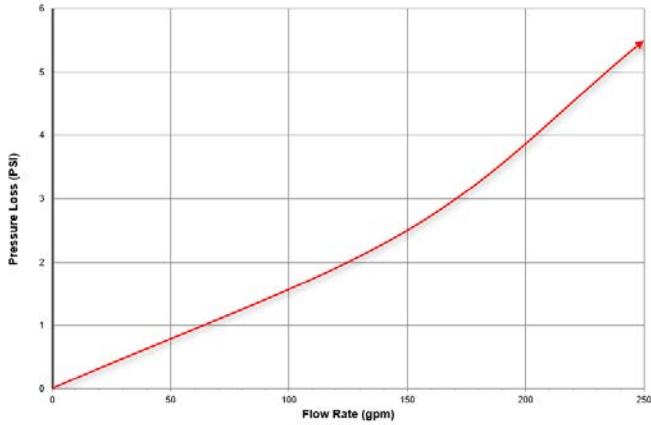


3" OCTAVE SS FF (sculpted ports)  
Pressure Loss Performance Chart

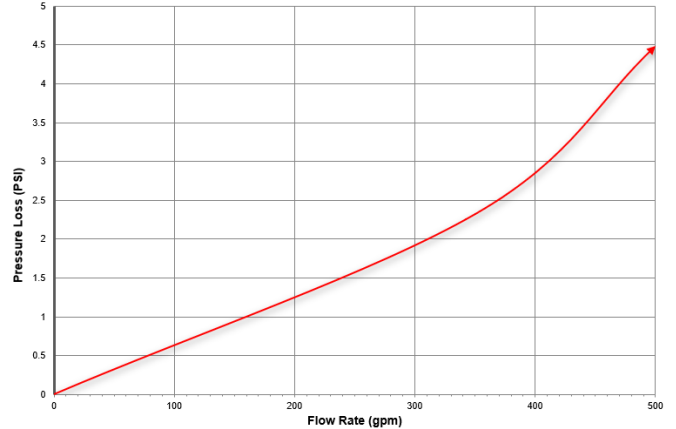


4" OCTAVE SS FF (sculpted ports)  
Pressure Loss Performance Chart

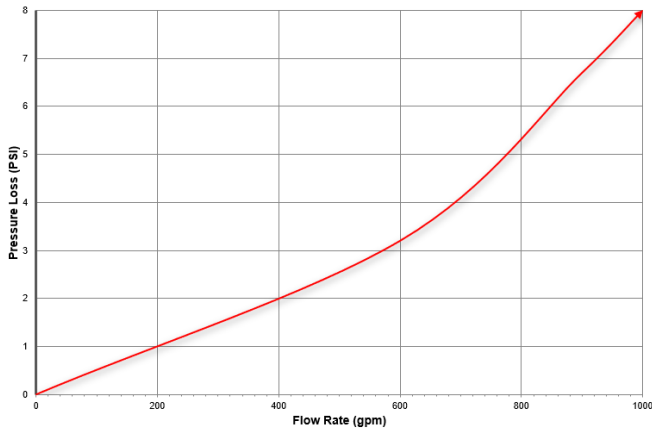


6" OCTAVE SS FF (sculpted and standard ports)  
Pressure Loss Performance Chart

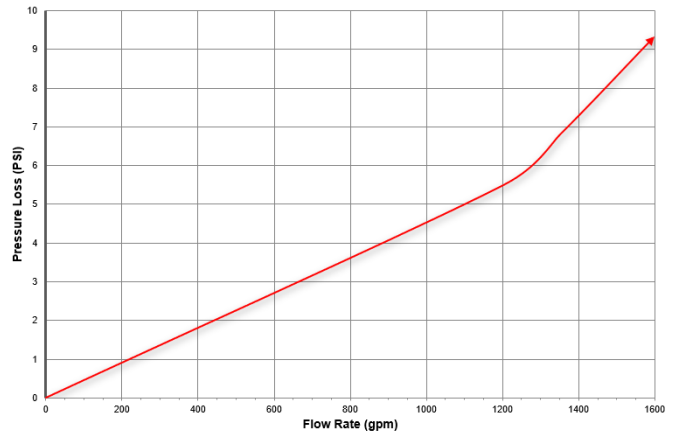

8" OCTAVE SS FF (sculpted ports)  
Pressure Loss Performance Chart

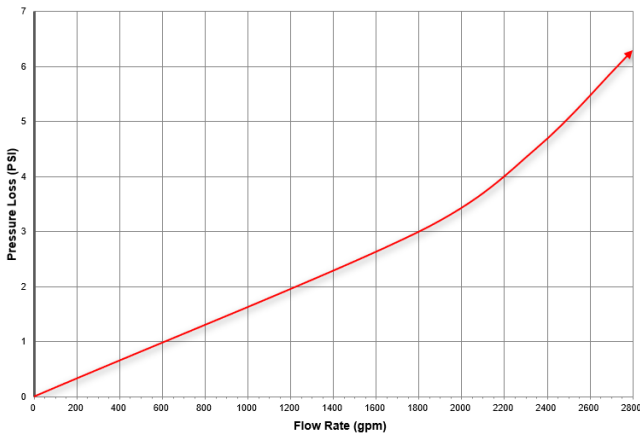

10" and 12" OCTAVE - DUCTILE IRON  
Pressure Loss Performance Chart

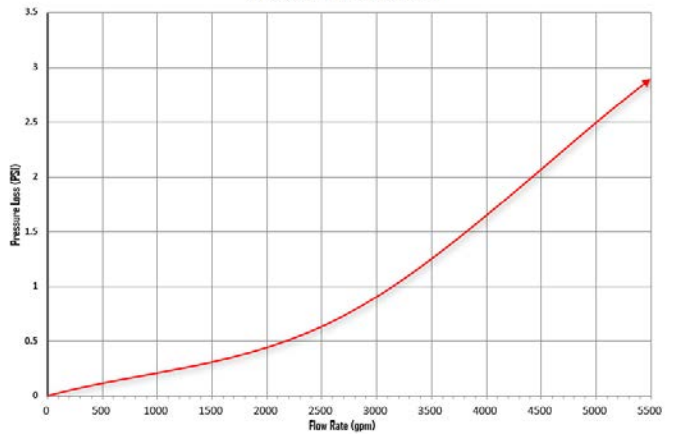

### 3.1 Pre-Installation

**Prior to installation check the following:**

- Flow rate and volume units are correctly programmed.
- The flow meter is correctly installed per the installation location and position recommendations.
- Output modules are correctly attached.

### 3.2 Handling of Octave

**IMPORTANT:**



- **DO NOT** use chains or wire cable to lift the Octave. To protect the epoxy coating, only use a nylon lifting strap with appropriate weight capacity.
- **DO NOT** lift the Octave by the electronic housing unit.
- **DO NOT** carry the Octave by its lid.
- **DO NOT** use bolt holes for grip when carrying the Octave.
- **DO NOT** position the flow meter on its electronic housing unit.
- When bolting the meter to pipe flanges, use washers on both nuts and bolts to protect the epoxy coating of the Octave.
- When handling the flow meter **avoid hard blows**, jolts or impact.

### 3.3 Installation Notes

The measuring tube should be completely full at all times for proper flow measurements. When sensors are not wet this will show a loss of signal. Though this will not cause damage to the meter, it will however not measure flow.

**FLOW DIRECTION:** The Octave is a bi-directional flow meter. **Note** the indicating arrow for forward and backward flows.

Master Meter recommends keeping the lid closed in case of direct sunlight exposure. However, no direct damage will occur while the lid is open temporarily.

Do not expose the meter to excessive vibration. To prevent this from occurring, support the connection pipe spools on both ends of the flow meter.

To avoid measuring errors due to air or an empty pipe, please observe the following precautions:


- Installation of the flow meter should be at the lowest point of the system, if possible, since air will be collected at the highest point of a system.
- If possible, maintain positive back pressure in meter outlet piping.
- In order to avoid cavitation, always install control valves downstream of the flow meter and never install the flow meter on a pump suction side.

3.4 Installation Location & Position


**Proper Installation**



**Improper Installation**

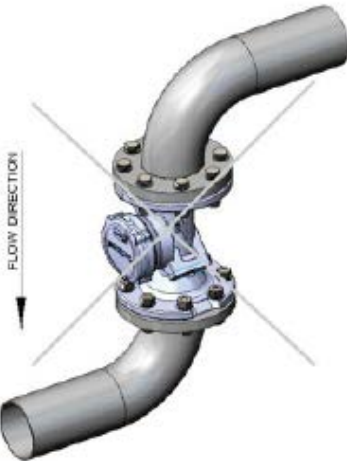

**Conditional Installation**

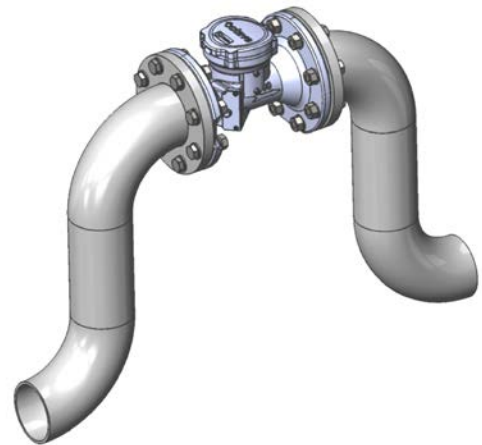


**Recommended:** If this is not the highest point in the system or a hydraulic jump has been installed to keep the flow meter full. The system has back pressured.


**Not recommended:** If this is the highest point in a system or if pipeline and/or flow meter is subject to being emptied between uses avoid this installation.




### 3.5 Additional installation requirements

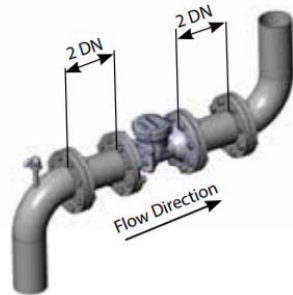


Two (2) pipe diameters before & after elbows (90°)

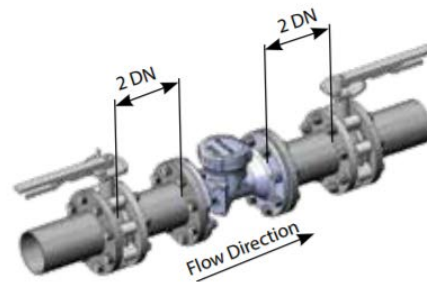


Minimum of two (2) pipe diameters before or after isolation valves. Open bore valves, such as resilient wedge gate valves can be bolted directly to the meter.

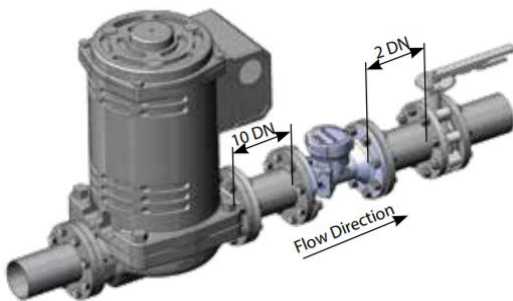


Minimum of ten (10) pipe diameters after pump discharge.

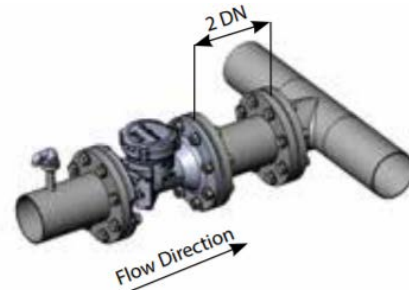

Minimum of two (2) pipe diameters before tee connections, including test tees.

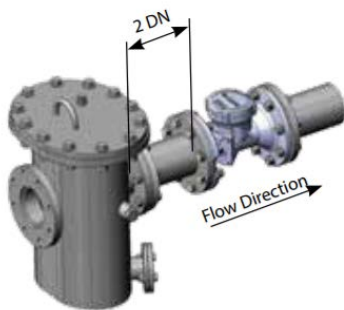

Minimum of two (2) pipe diameters before or after strainers for ISO version Octaves (primarily sold outside North American Market). AWWA length Octaves (primarily sold in North American markets) may be bolted directly to a strainer.

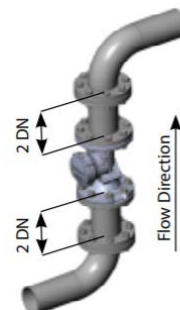








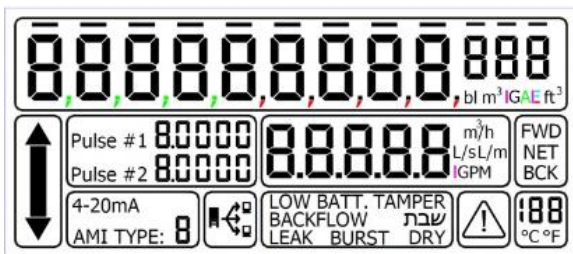



Two (2) pipe diameters before and after elbows (90°) in vertical installations

## 4.1 Digital Display

The Octave meter comes with a factory programmable digital display built to your specifications. At the time of order you can select:

- **Volume units** in US gallons, Imperial gallons, Cubic Feet, Cubic Meters, Barrels, Acre Feet or Acre Feet
  - US Gallons will display a constant GAL on the LCD
  - Imperial Gallons will display a constant IGAL on the LCD
- **Rate of flow measurement** in US Gallons per Minute, Imperial Gallons per Minute, Liters per Second, Liters per Minute or Cubic Meters per Hour
- **A programmable decimal** with flow measurement as low as 1/1000<sup>th</sup> of a measurement unit.
- **Single output mode** in either encoder (UI1203), digital pulse (open drain or dry contact), 4-20 mA, or no output mode
- **Dual output mode** (optional) in encoder + open drain digital pulse
- **Volume Display Option** in either Net Flow, Forward Only, or Alternating.
  - **Net Volume** – The meter measures both forward and reverse flow. If backward flow is detected, the totalizer will begin to decrease.
  - **Forward Flow Only** – The meter measures forward flow only. Reverse flow is disregarded.
  - **Alternating Flow** – The totalizer will display only forward flow, then toggle to display only reverse flow. The timing of the how long each measurement is displayed is programmable with this software version.



	Flow Direction		Communication		Volume Units
	Flow Rate Units		Empty Pipe / Error		Pulse Resolution
	Accumulation Mode		Water Temperature		Alarms / Alerts
	Additional Output Modes				




**Sleep Mode** – After 24 hours of an empty pipe the meter will switch to sleep pipe.

**Checksum** – After 1 minute of no flow, the meter will flash a series of letters and numbers in place of the rate of flow to show the checksum of the software version.

4.2 Pulse Output (Open Drain)

Pulse #1 800000  
Pulse #2 800000

Pulse Type: Open Drain that allows current loading of 200 mA, and up to 30 VDC.

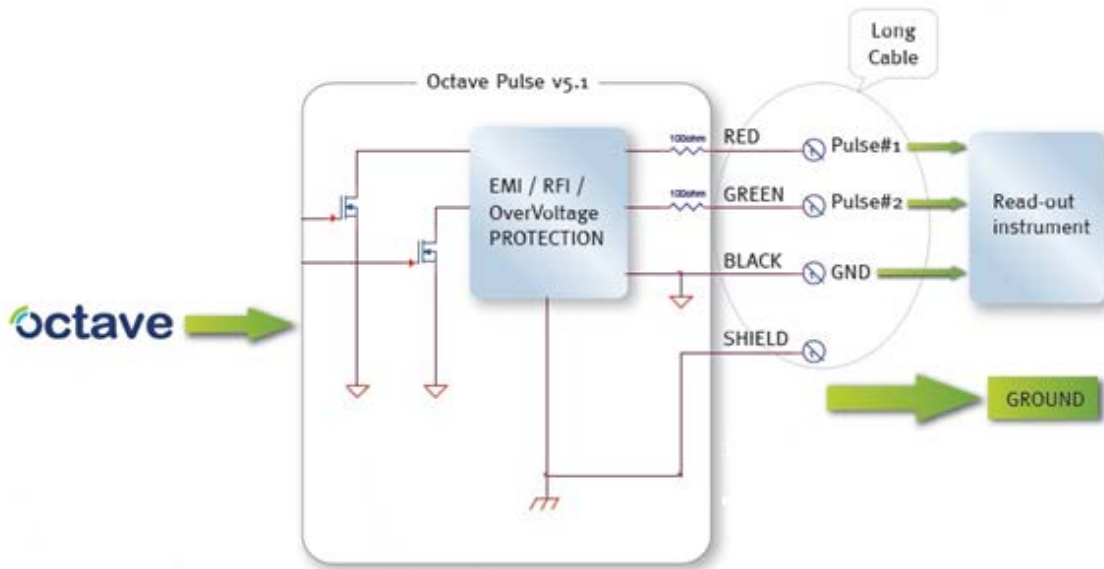

Pulse Module Wire Colors

	Wire Color	Function
Long cable	Red	Pulse Out #1
	Green	Pulse Out #2
	Black	Common
	Bare Wire	Shield

**Warning: Signal connection polarity is mandatory**

Output Characteristics


Output Type	Open drain
Cable Length - Supplied	9 feet
Maximum Cable Length*	1,640 feet
Maximum Supply Voltage	30 VDC

\* The maximum cable length depends on: cable type, controller, and electrical noise level.

4.3 Pulse Output (SSR Dry Contact)



Pulse Type: Dry Contact that allows current loading of 120 mA, and up to 35 volts.

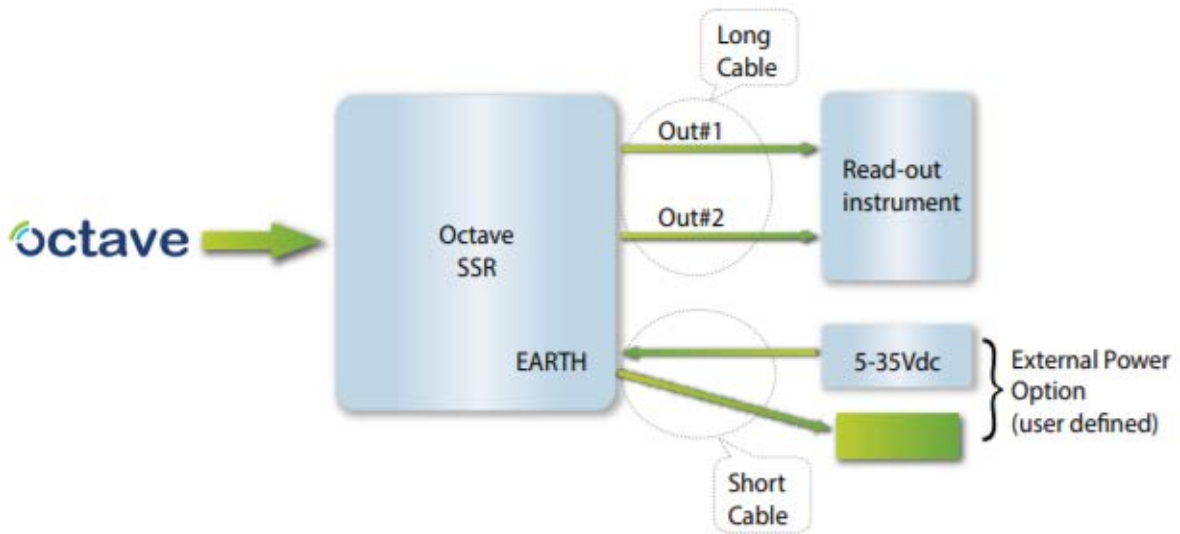

Pulse Module Wire Colors

	Wire Color	Function
Long cable	Red	Output #1
	Orange	Output #1
	Black	Output #2
	Brown	Output #2
Short cable	Red	24V +
	Black	24V -
	Yellow	GROUND

**Warning: Signal Polarity is mandatory on Short Cable wires but is not mandatory on Long Cable wires.**

Output Characteristics


Output Type	SSR Dry Contact
Cable Length - Supplied	9 feet
Maximum Cable Length*	1,640 feet
Output Voltage max.	± 400 (V)
Output Current max.	120 mA (.12 A)
Supply Voltage	3-35 VDC

\* The maximum cable length depends on: cable type, controller, and electrical noise level.

4-20mA

4.4 4-20 mA Output (Analog Communication)

The current output is a passive 4-20 mA. Power must be provided by the customer. 4 mA is always “0” (zero) flow and the 20 mA is factory programmable according to the customer’s requirements. (If the customer has not specified the 20 mA at the time of order, the Octave will be programmed with the 20 mA at the max flow of the meter.)

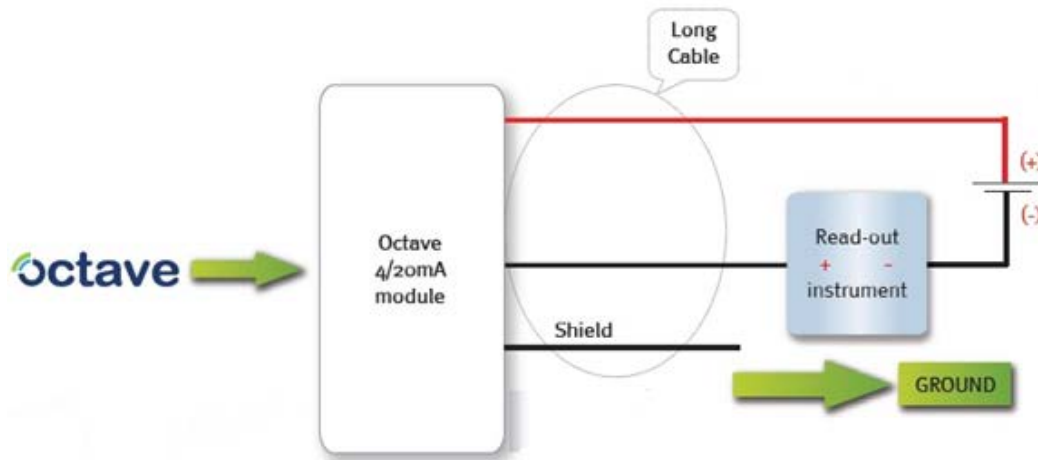

4-20 Module Wire Colors

	Wire Color	Function
Long cable	Red	Current loop +
	Black	Current loop -
	Bare Wire	Shield

**Warning: Signal connection polarity is mandatory**


Output Characteristics

Output Type	4-20 mA passive current output
Cable Length - Supplied	9 feet
Maximum Cable Length*	1,640 feet
Loop Supply Voltage	12 - 24 VDC
Output Impedance	25 (mΩ) typ.

\* The maximum cable length depends on: cable type, controller, and electrical noise level.



4.5 Encoder Output



- UI1203 encoder open communication, with a maximum reading up to 8 digits, depending on the programming of the attached output module
- Encoder digits are represented by lines above each digit transmitted to an AMR or AMI on the volume totalizer.
- Serial communication collector
- Data output line is a solid state switch requiring external pull-up
- AMI Type for Encoder is : 0

Encoder Module Wire Colors

Wire	Function
Red	Power
Green	Data
Black	Ground

Output Characteristics

Output Type	Encoder
Cable Length - Supplied	9 feet
Maximum Supply Voltage	15 Vdc
Maximum Power Load	.04 Vdc

4.6 No Output (Manual Read)

The Octave meter can be programmed to not send a communication signal at the customer's request; however Master Meter recommends selecting a communication mode for future migration to AMR or AMI.

## 4.7 Output Module Installation (Optional)

All Octave water meters are shipped with either a cover plate or communication module installed on the side of each meter. Even if the meter is not going to be read by radio or some other electronic unit, it is important to leave one of these devices installed on the Octave to prevent damage to the communication port. **Installing an Octave without a cover plate or communication module would void any warranty.**

If you received an Output Module separate from your Octave meter, please follow the steps below to ensure proper installation of the module. Read through these instructions before attempting to remove the cover plate. Your module came as a complete installation kit with the supplies shown in Pic. 1.

### Octave Output Module Installation Parts



**Step 1:** Remove the Sealing Cap from the cover plate (Pic. 2).

**Step 2:** Using the 3mm Allen Key provided, remove the cover plate (Pic. 3). Keep the cover plate and 3mm x 15mm screws for future use. The communication port is now exposed. (Pic. 4)

**Step 3:** Place washer around the 4-prong plug of the output module. (Pic. 5 & 6)

**Step 4:** Insert Output Module into the communication port (Pic. 7), with the cable pointing down. This will allow the slot inside the communication port to align with the groove on the module. Do not force the module into the communication port. This may cause damage to the pins. Secure into place using the 3mm x 20mm screws provided. Tighten until the screws stop. (Pic. 8)

**Step 5:** Push the Sealing Cap into the lower screw hole (Pic. 9). Lock the Sealing Cap in place by firmly pushing in into place or gently tapping it in with a small hammer.

**Note:** If at any time the module needs to be removed, take caution not to allow dirt or water into the communication port. If the module is going to be removed for an extended period of time, reinstall the cover plate and the 3mm x 15mm screws.




Pic. 2

Pic. 3




Pic. 4

Pic. 5

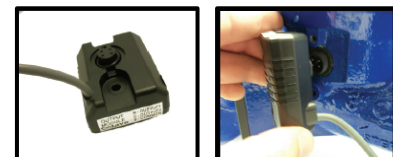

Pic. 6

Pic. 7

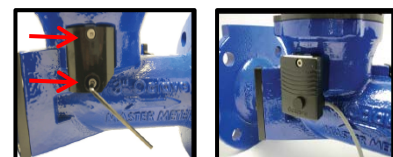

Pic. 8

Pic. 9



4.8 Wire Connectivity Chart

The following chart is designed to assist in wiring the Octave module to various AMR/AMI Radios. The Octave transmits up to 8 digit output encoder output. Pulse output resolution is available in resolutions of x0.1, x1, x10, x1,000, or x10,000.

By default Octave encoder modules are provided with Nicor connectors, however you may also select Itron Connectors, magnetic inductor coils for wall or pit mount, for bare wire. Nicor connectors are factory potted. All other connectors are spliced with water resistant heat shrink wrap.

Manufacturer	Model	Communication Type	Octave Red Wire	Octave Green Wire	Octave Black Wire
Aclara	Star 3000 Series	Encoder	Red	White	Black
	Star 3000 Series	Pulse	Red	N/A	Black or White
Badger	Orion	Encoder	Red	Green	Black
Datamatic	Firefly	Encoder	Red	White	Black
	Mosaic	Encoder	Red	Green	Black
Elster	MTU	Encoder	White	Red	Black
	MTU	Pulse	Red	White	Green
Hersey	Hot Rod	Encoder	Red	Green or White	Black
Itron	60w	Encoder	Green	Red	Unshielded
	60wp	Pulse	Red	N/A	White
	100w	Encoder	Grey	Brown	Yellow
Kemp Meeks	Visu-Link VL-9S	Pulse	Polarity does not matter - Connect Red and Black Wires to either terminal, disregard green wire		
	Visu-Link VL-9	Encoder	Red	Green	Black
Master Meter	Allegro PT	Encoder	Red	Green	Black
	Universal XTR	Encoder	Red	Green	Black
	Fast Pulse XTR	Pulse	Red	N/A	Black
Metron Farnier (T2)	T2 M2w	Encoder	Red	Green	Black
Neptune	R900	Encoder	Black	Red	Green
Sensus	MXU Pit Unit	Encoder	Red	Green	Black
	MXU Wall Unit	Encoder	Red	Green	Black
	Touch Pad	Encoder	Red	Green	Black

*\*Note – when connecting to Master Meter’s Allegro PT or 3G XTR, the Octave will typically output an 8 digit reading, unless otherwise specified. When connecting to another manufacturer’s radio or read device, it is recommended to confirm with that provider what the actual reading resolution of the connecting device is.*